


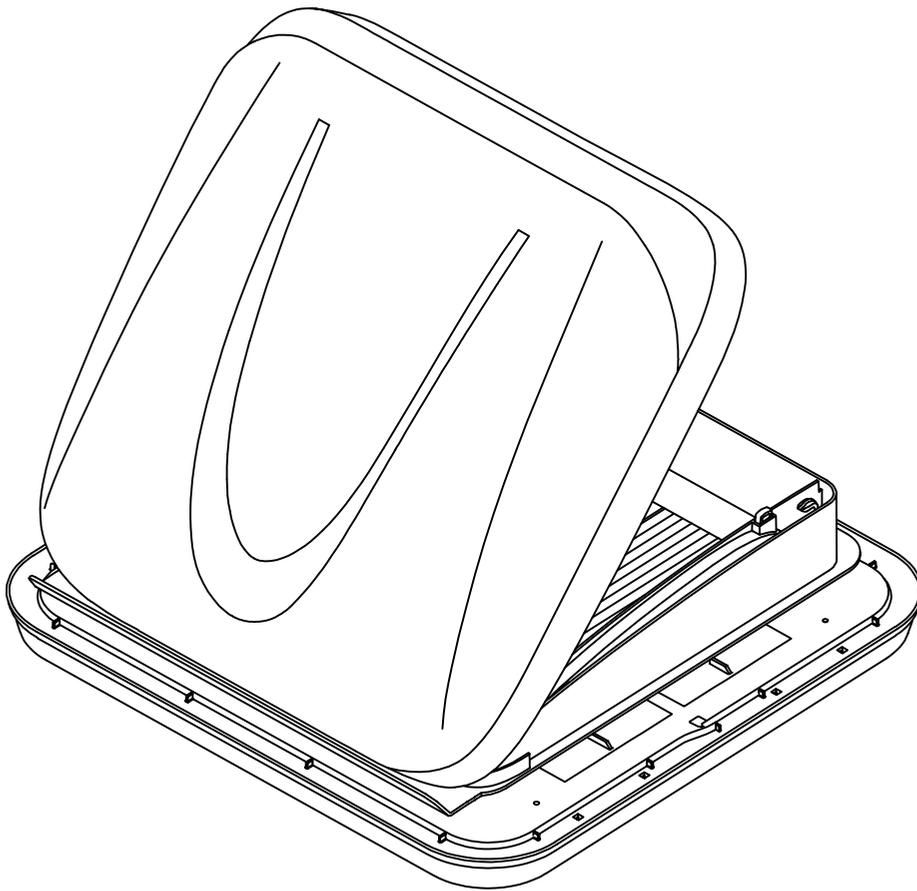

**EN** Roof Windows User & Installation Manuals



Model:3J-RW-2

EN >>

# Contents

---

## Use

Main components	02
Security considerations	03
Roof window use	04

## Installation

Product size	07
Packing List	08
Install Instructions	09

## Others


Warranty regulations	13
Warranty card	14

- 
- Thank you for purchasing our products! Please read this manual carefully before you use the product save it for future reference.



# Main Components

## Roof window

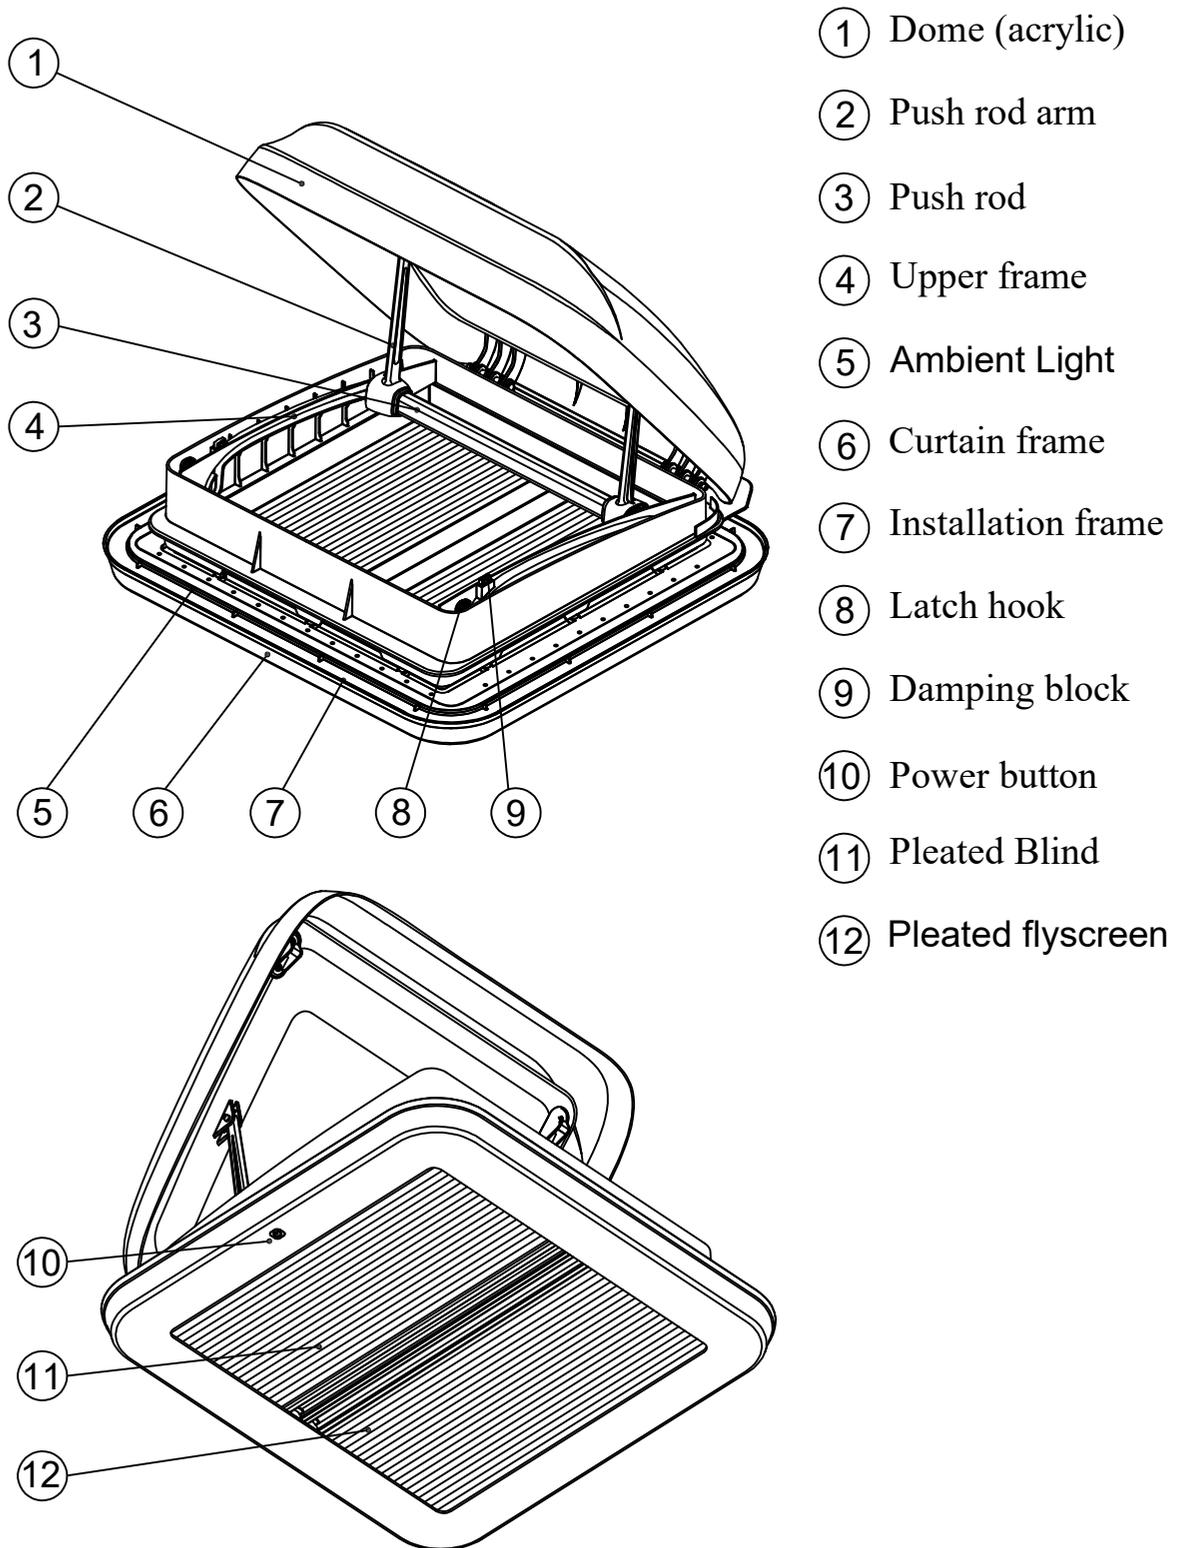

Note: The version without ambient lights has no power button.

# Security considerations

Please read this manual carefully before installation, and first use, and store it in a safe place. If you pass on the product to another person, hand over this instruction manual along with it.

In order to avoid property damage to users and others, please strictly follow the safety warnings and precautions.

- Symbols and meanings

	Warning! Risk of causing serious injury or damage.
	Attention! Not follow instruction will lead to damage.
	This symbol indicates that this operation is prohibited.
	This symbol indicates related information.

## Warning!

1. The ambient light must be connected to a DC12V power supply and the power supply must be correctly connected. Otherwise, the product may be damaged or cause a fire.
2. Please lock the dome of the roof window before driving, otherwise the acrylic may be damaged when driving.

## Attention!


1. Please close the dome of the roof window on rainy days, or open the top cover to the ventilated gear, but you need to switch the skylight from the ventilated gear back to the close when driving.
2. The push rod can withstand a maximum pull-down force of 30kg. Do not hang heavy objects on the push rod.
3. When closing the dome, please pull down the push rod to the end, make sure that both ends are stuck in the corresponding position and make a clicking sound, and make sure that the push rod is completely locked.
4. If faults or disturbances occur, consult a specialist workshop immediately.
5. Before starting your journey, check the roof window for damage (such as tension cracks in the acrylic glass).
6. Do not open the window in strong wind or rain. Close the roof window if it rains or snows. Do not leave the vehicle with the roof window open. Keep the roof window free of snow and ice.

# Roof window use

---

## Ambient Light


Number of touches	One	Two	Three	Four	Five
Corresponding function	1 <sup>st</sup> gear	2 <sup>nd</sup> gear	3 <sup>rd</sup> gear	Standby	1 <sup>st</sup> gear

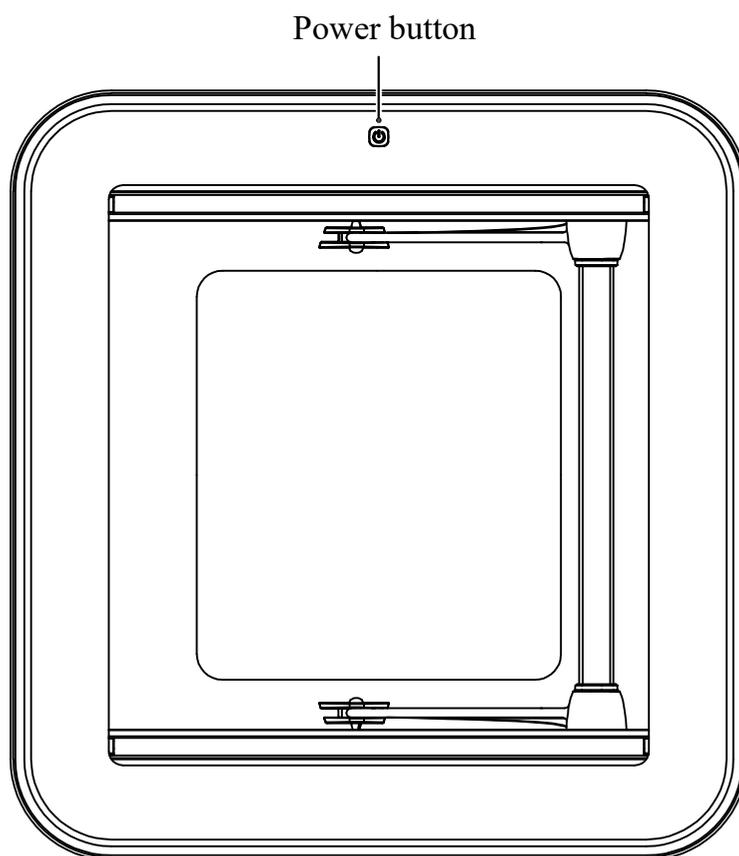



Please turn off the power when leaving the car for a long time!

# Roof window use

## Open the Dome

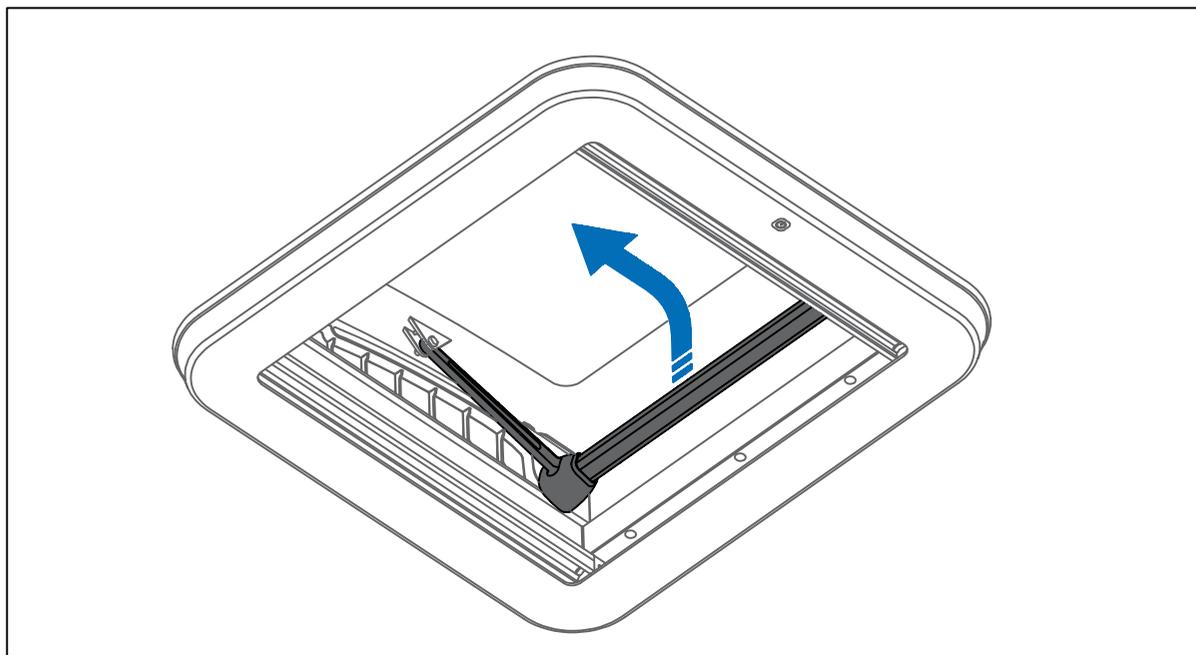


Push the push rod up to unlock and continue to slide toward the front of the car to fix the push rod at 5° semi-ventilated gear or 50° fully-ventilated gear

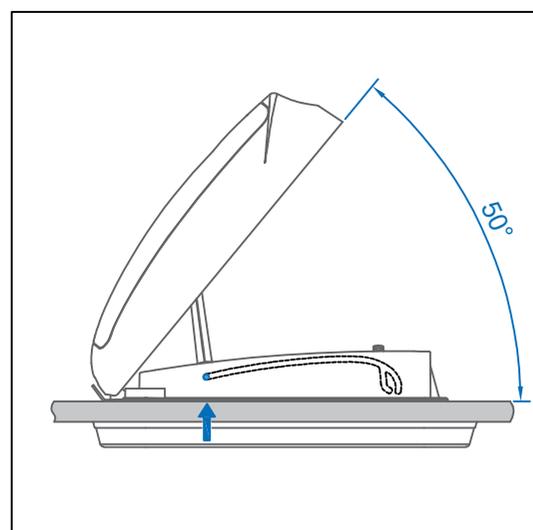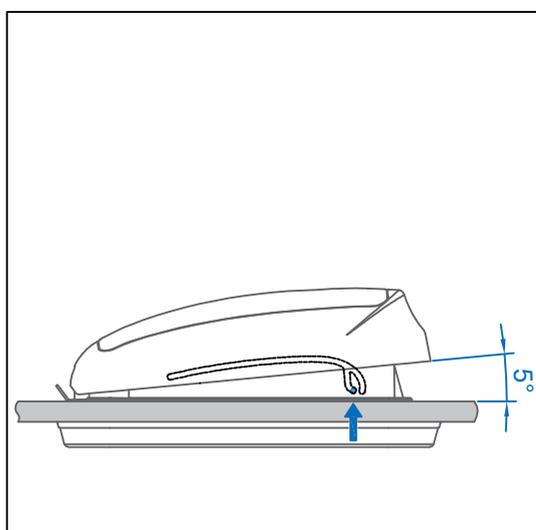

Hold the middle position of the push rod when opening the roof window, this position is more conducive to unlocking.


# Roof window use

## Close the Dome

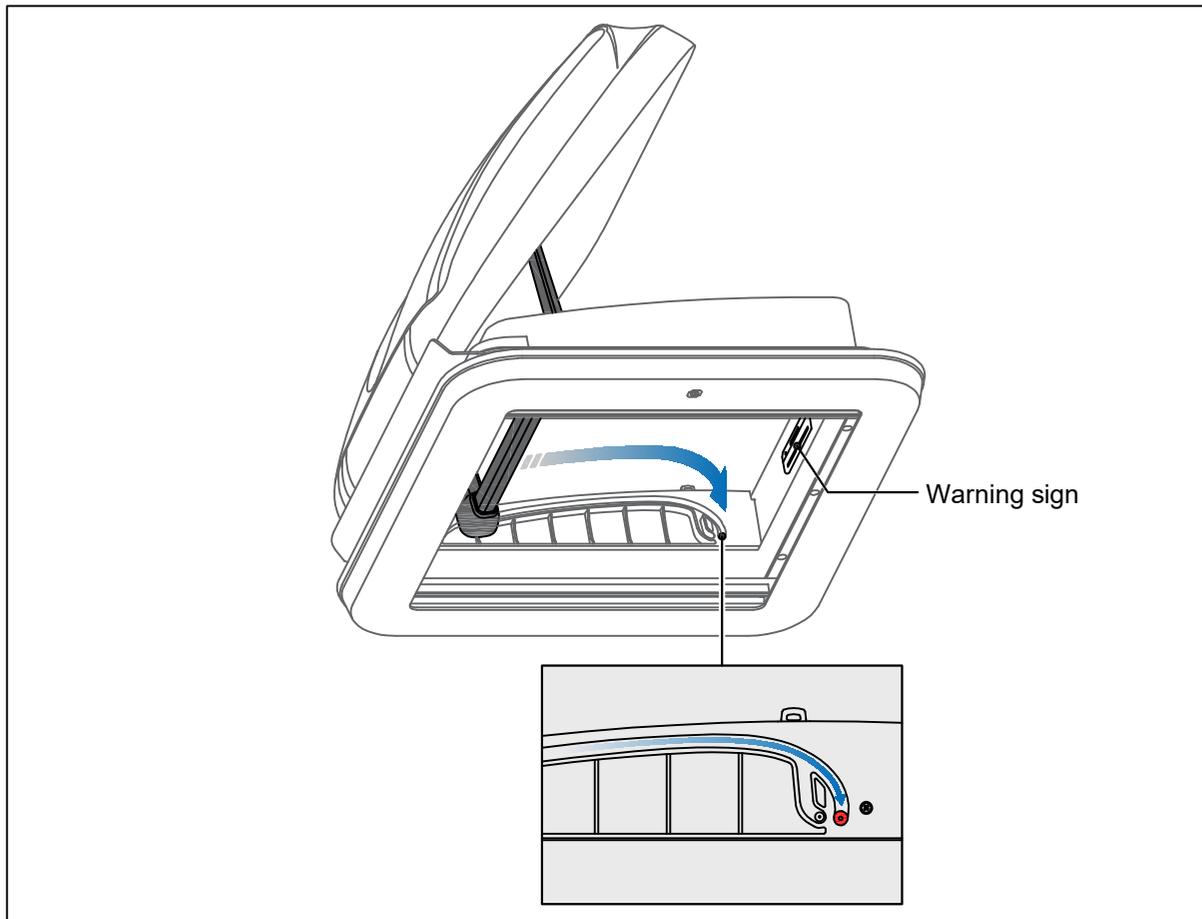

Slide the push rod along the track to the end of the track (the red position in the picture) and make a click sound, which means that the push rod is locked


Warning sign

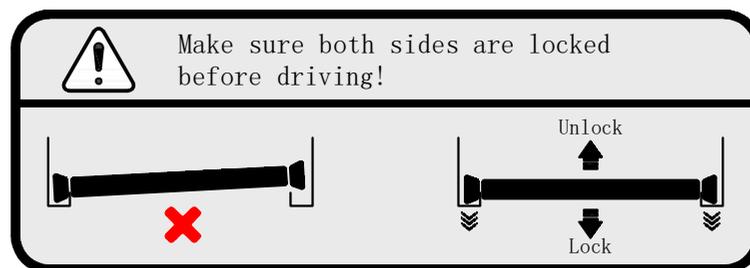







Please make sure that both ends of the push rod are locked before driving!

# Product size

Unit: mm

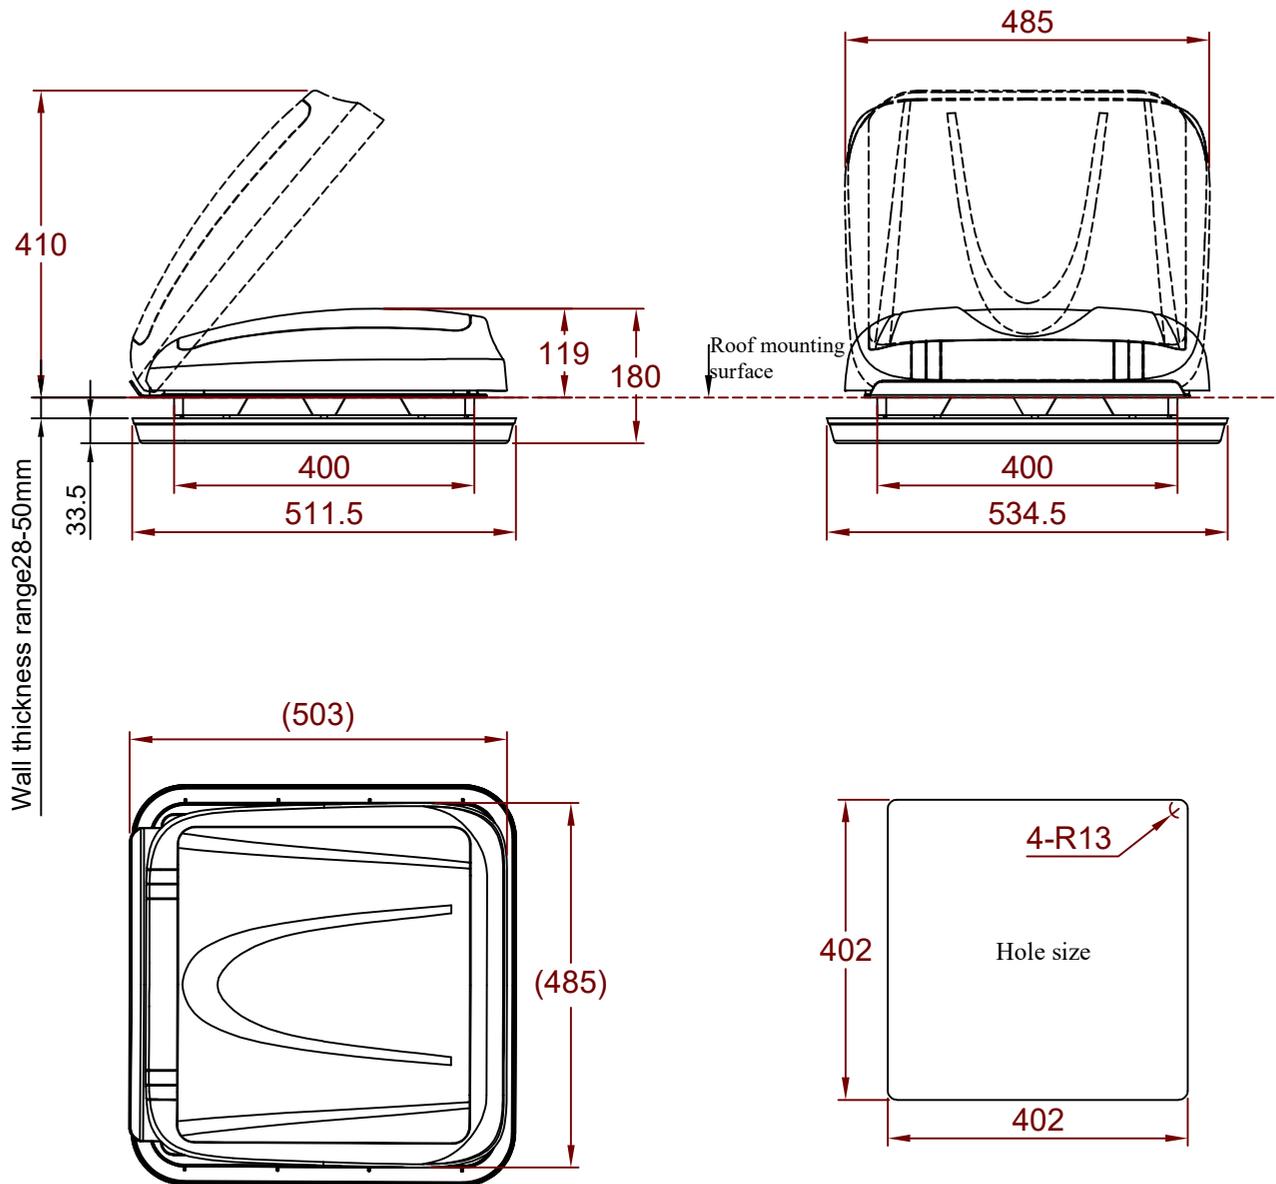


# Packing list

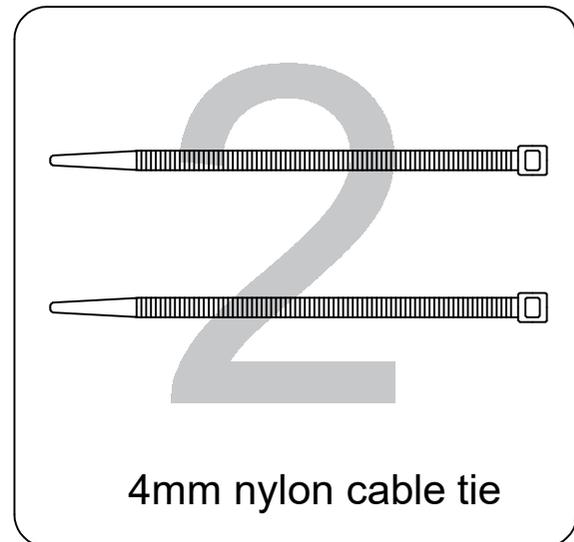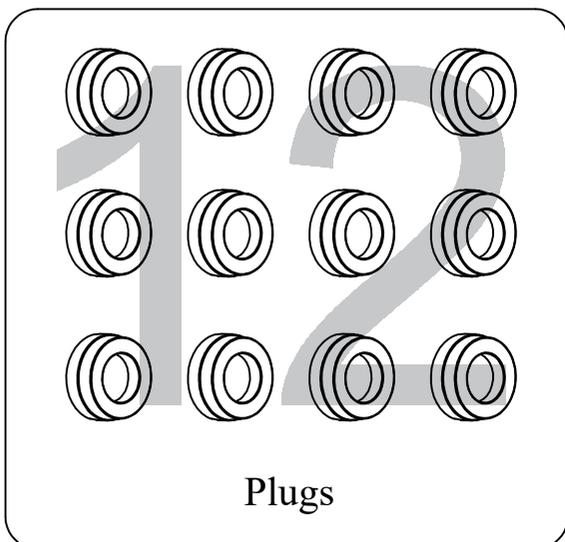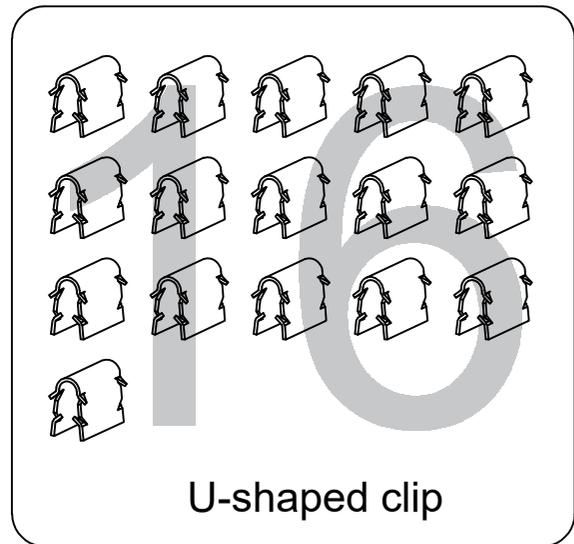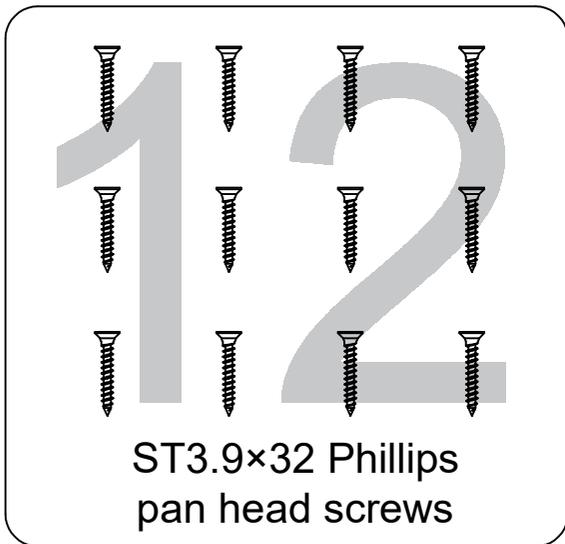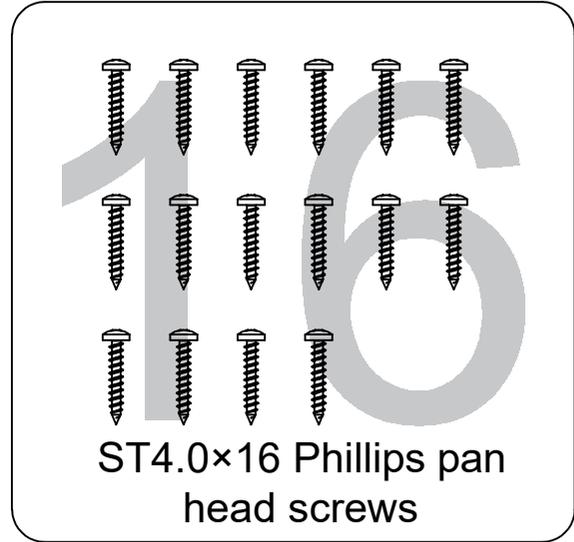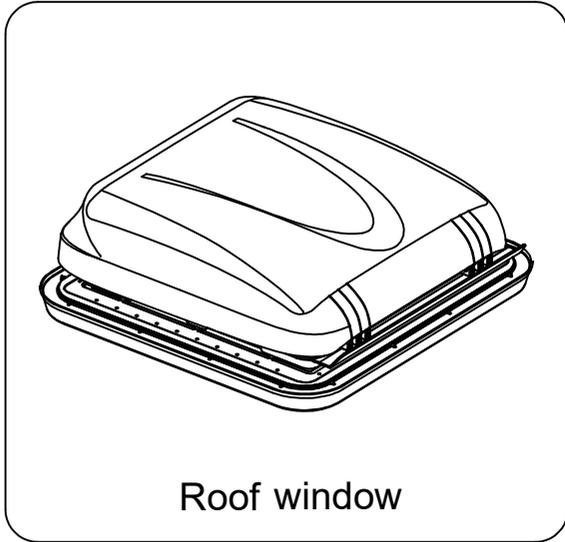


# Install Instructions

1、 According to the hole size drawing on the product size page, cut the installation hole on the roof (a solid wall  $\geq 30\text{mm}$  wide is required around the opening so that the screw can be firmly nailed into the wall), and you can choose to install it on the left or right( reserve a room for a power cord  $\geq 50\text{mm}$  in the side hole).

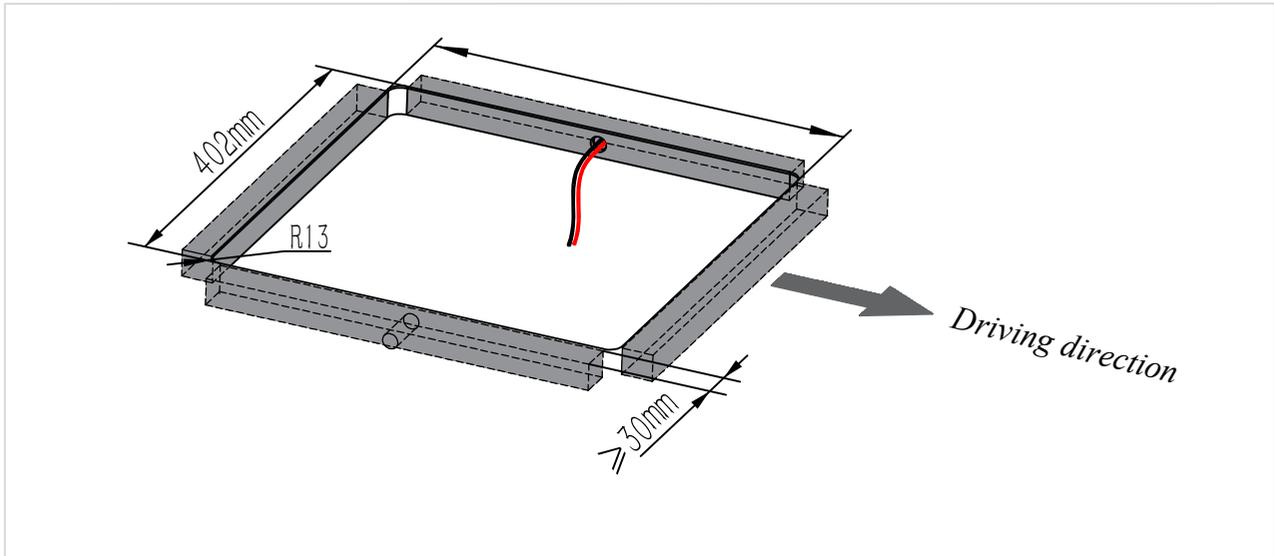

**i** This installation instruction takes the outlet on the left side of the car body as an example.


2、 After observing the position of the touch switch on the mounting frame, confirm the direction of the mounting frame according to the reserved position of the power cord (the switch position and the reserved line position are on the same side), and use 15 ST4.0×16 self-tapping screws from the inside car to fix the mounting frame on the roof, and check whether the mounting frame is fixed well to the roof.

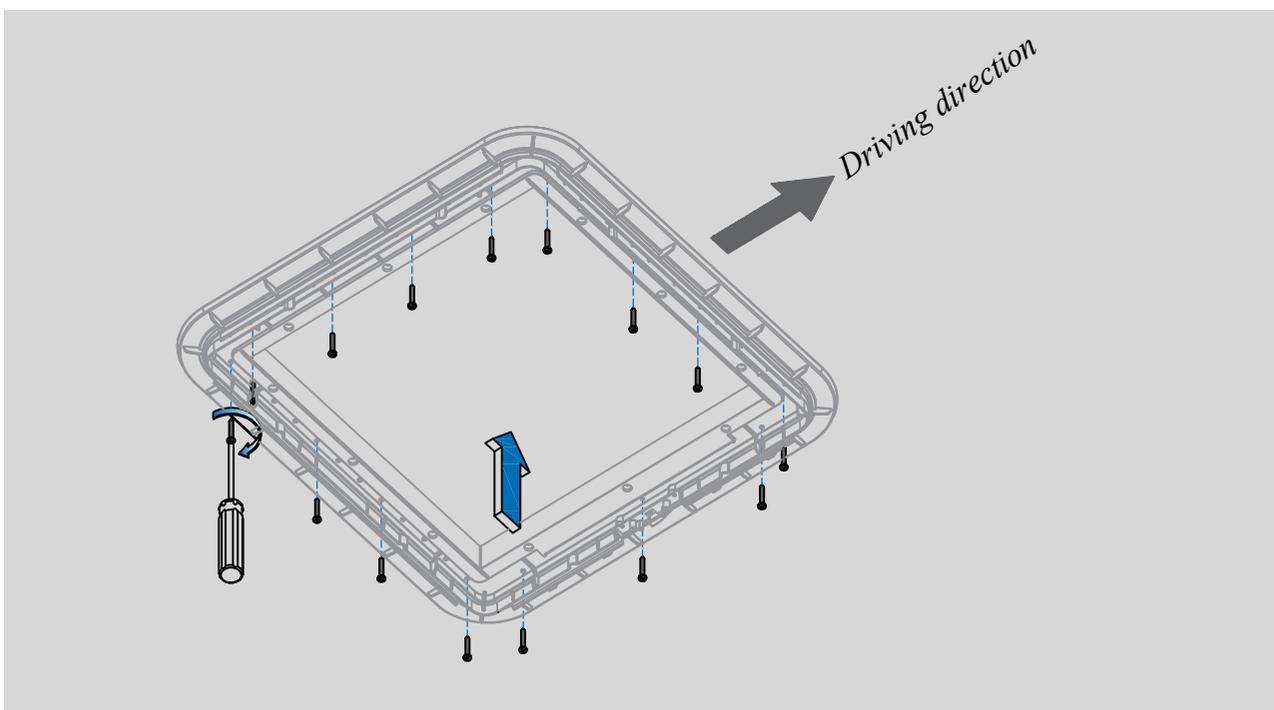

**i** The frame body should be aligned with the hole in the center, with the same seams all around, and pay attention to protect the induction spring on the circuit board during installation.


# Install Roof window

3、 Connect the reserved cord to the touch panel power cord and wrap it with electrical tape, and use a 4mm wide cable tie to tie the excess power cord to the fixed point of the light guide (there are fixed points on the left and right sides), and check whether the light strip works normally after power on.

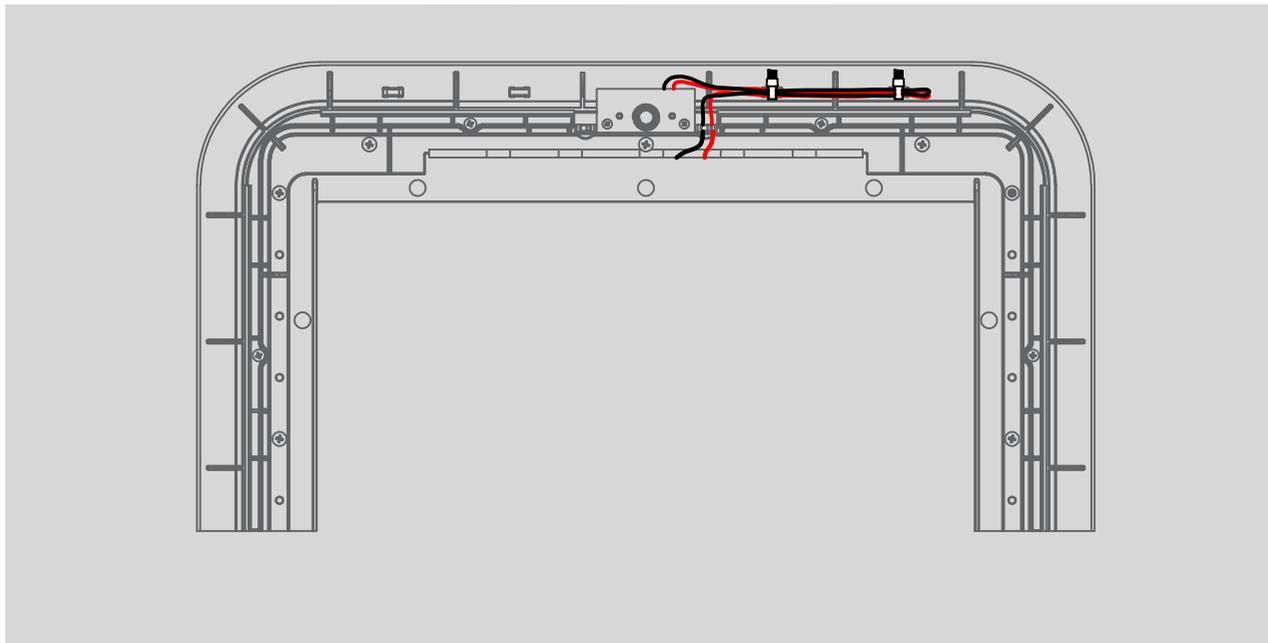


Pay attention to protect the spring on the circuit board during installation

4、 Apply a ring of sealant evenly in the glue groove of the upper frame of the skylight.

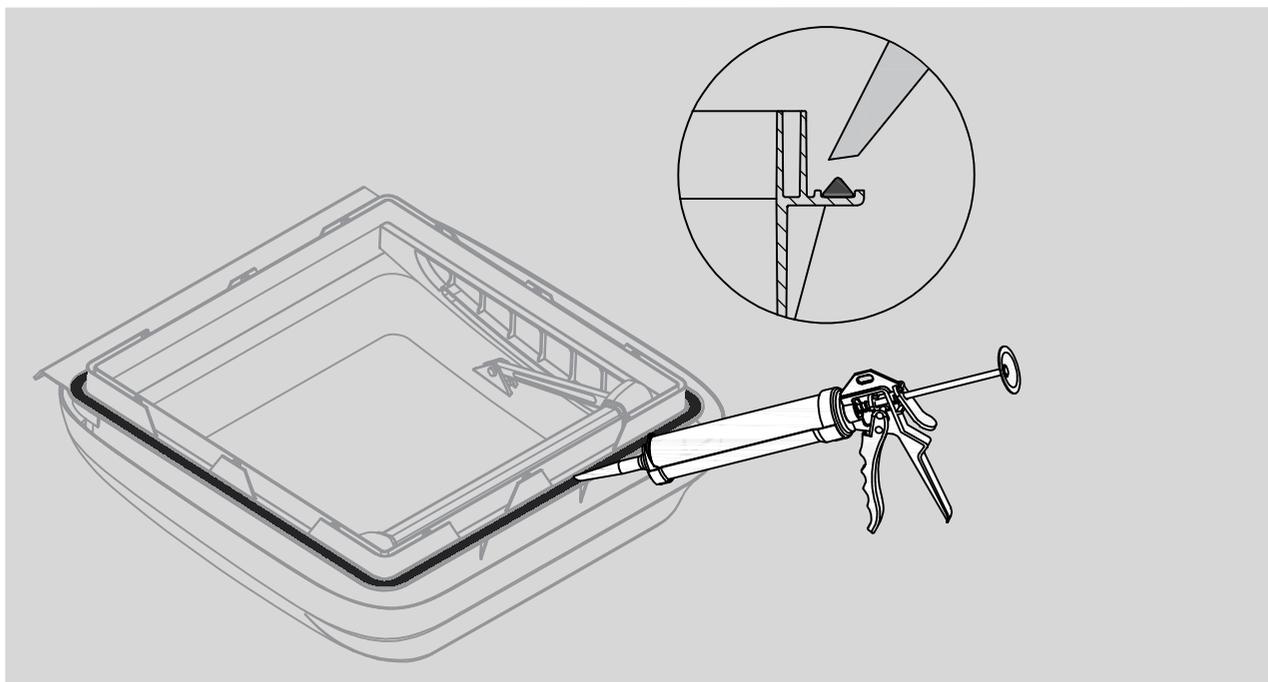


# Install Roof window

5、 Clean the oil and dust on the roof mounting surface, and then install the upper part of the skylight into the hole.

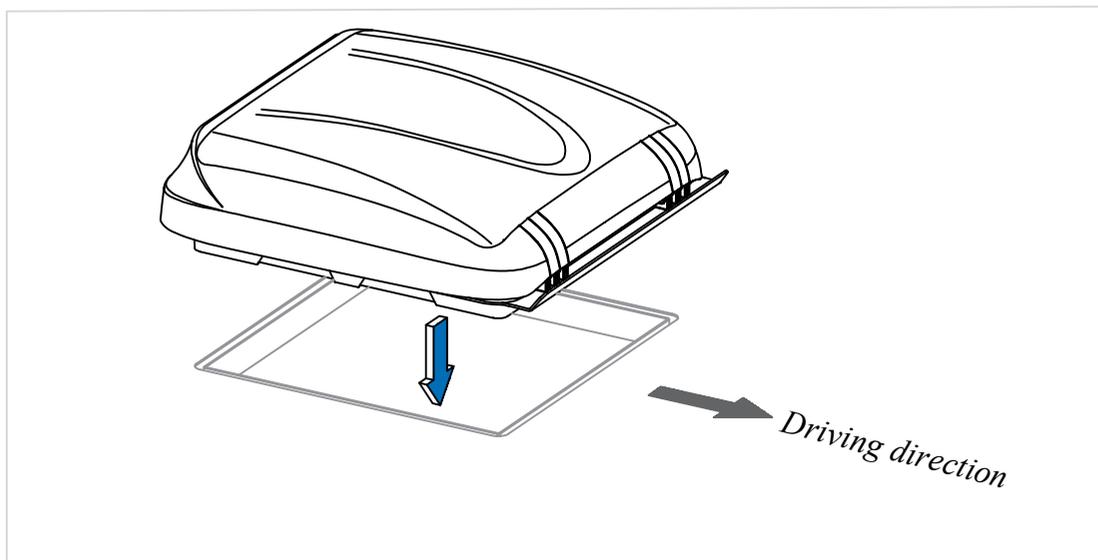


6、 Use 12 ST3.9×32 self-tapping screws to fix the upper part of the roof window from inside the car, then insert 12 plugs into the screw holes and make them flat.

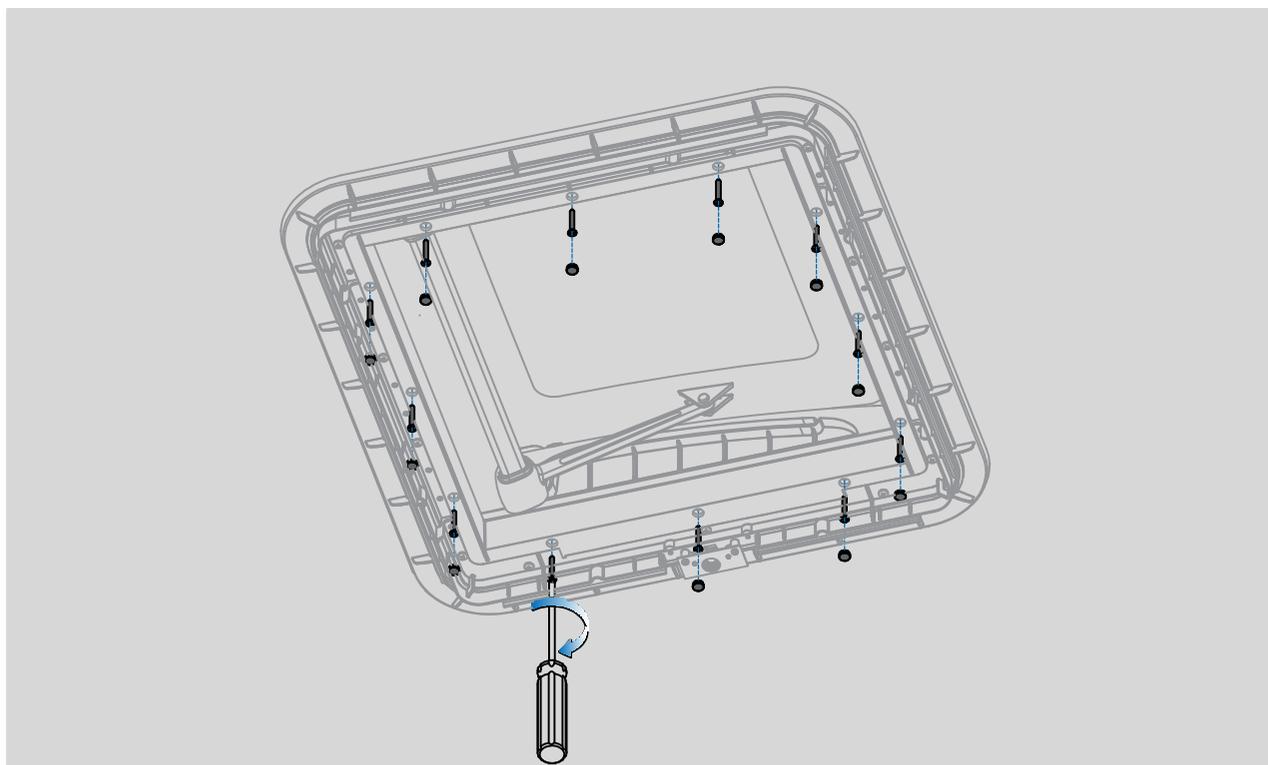

# Install Roof window

---

7、 Clamp the 16 U-shaped clips onto the fins of the curtain frame and then clamp them upward into the installation frame, and pat the curtain with your hand or a rubber hammer to make it fully clamped, and check the curtain frame is tightly attached to the Installation frame.

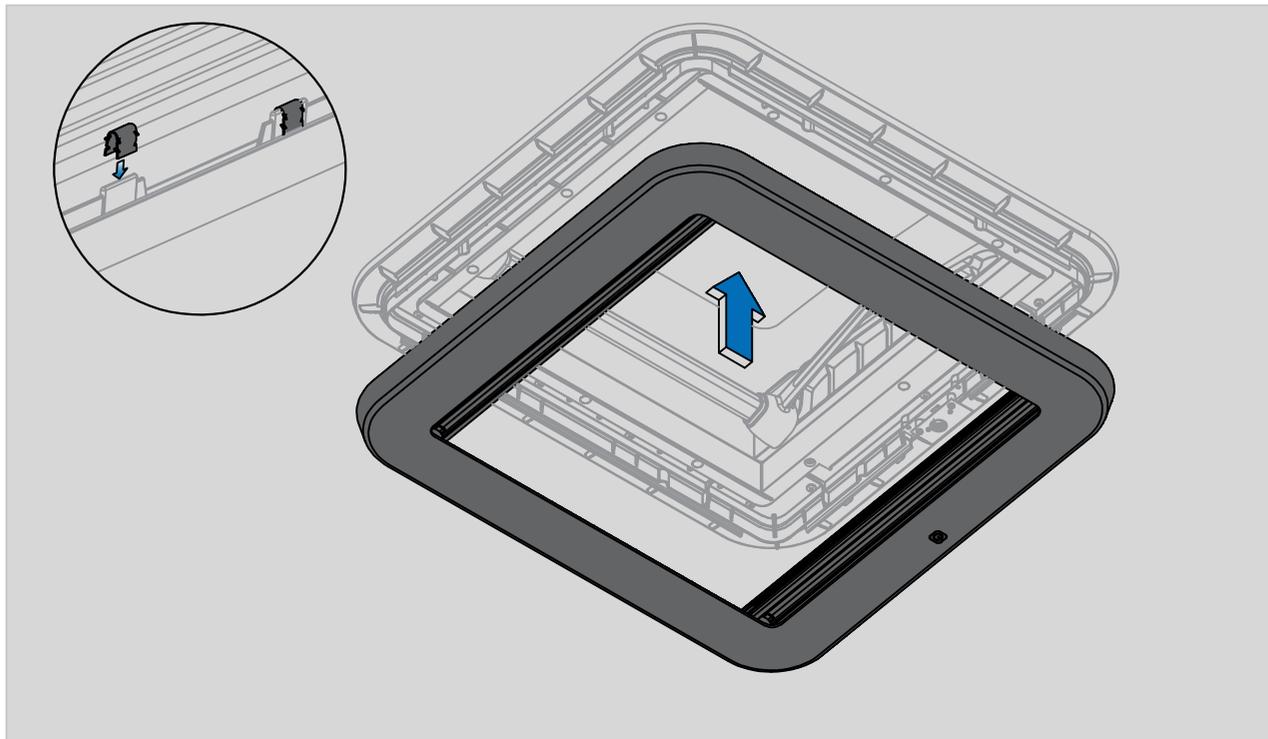

8、 Check whether the lights, curtains, and top cover can be used normally.

# Warranty regulations

---

- 1、 This product is guaranteed free of charge for one year.
- 2、 During the warranty period, the fault caused by normal use in accordance with the instructions (determined by the official staff of the company) will be repaired free of charge.
- 3、 During the warranty period, in case of any of the following circumstances, a charge repair and lifetime service will be implemented:
  - 1) Unable to provide this warranty card and valid purchase certificate.
  - 2) Invoice alteration.
  - 3) Failure and damage caused by unexpected factors and improper use.
  - 4) Failure damage caused by self-repair without permission of our company.
  - 5) Damage caused by using power supply and voltage other than specified.
  - 6) Products that continue to be used after the expiry of three guarantees after repair.
- 4、 Only the above warranties are made without any other warranties, express or implied, including the implied warranties of merchantability, rationality and adaptability for a particular application). The company shall not be liable for any special, incidental or indirect damages, whether in contract, in civil negligence or otherwise.
- 5、 The period of validity of the three guarantees is calculated from the date of invoice, excluding the time occupied by repair and waiting for repair without spare parts. During this period, the consumer shall handle the repair, return and replacement with the invoice and Three Guarantees certificate.
- 6、 The consumer can choose to return, exchange or repair the product in case of performance failure within 7 days from the date of sale.
- 7、 If the product fails within 15 days from the date of sale, the consumer can choose to replace or repair it.

After-sales service:



# Warranty card

---

Product name: \_\_\_\_\_  
Product model: \_\_\_\_\_  
Serial number: \_\_\_\_\_  
Date of manufacture: \_\_\_\_\_  
Customer name: \_\_\_\_\_ Contact number: \_\_\_\_\_  
Customer address: \_\_\_\_\_

---

Warranty content: \_\_\_\_\_  
After sales: \_\_\_\_\_  
Customer signature: \_\_\_\_\_  Satisfied  Dissatisfied

---

Warranty content: \_\_\_\_\_  
After sales: \_\_\_\_\_  
Customer signature: \_\_\_\_\_  Satisfied  Dissatisfied

---

Warranty content: \_\_\_\_\_  
After sales: \_\_\_\_\_  
Customer signature: \_\_\_\_\_  Satisfied  Dissatisfied

